



Phone 0800 567 7954

Fax 0870 123 6254

Email info@impactrubberflooring.co.uk

Web www.impactrubberflooring.co.uk



CLEANING / MAINTENANCE FOR RUBBER FLOORING

FLOOR PROTECTION

Proper protection should be followed post-installation and until job construction is complete, such as covering the entire floor with appropriate floor covering (paneling, plastic, plywood, etc.) until construction is completed and thorough cleaning and maintenance can begin.

CLEANING & MAINTENANCE PROCEDURES

A. Post Installation

1. Thoroughly clean entire floor of dirt and debris. Dry vacuum to ensure all fine soil is removed.
2. Use a mild detergent - damp mop the entire floor and rinse with clean water.
3. Wet vacuum any remaining soiled solution – if needed.
4. Allow floor to dry thoroughly before applying floor sealer if required.
5. Apply **HUSKY SEALER or similar** using a roller or sponge type mop in medium coats. (2 coats minimum, 4 coats max.)
6. After there is no tackiness to the touch allow sealer to dry an additional 10 minutes before applying next coat.
7. After applying the final coat allow at least 30 minutes before any traffic is allowed on surface. The longer the cure before traffic, the better the wear resistance will be. (Approximate coverage is 150 sq m.)



Phone 0800 567 7954

Fax 0870 123 6254

Email info@impactrubberflooring.co.uk

Web www.impactrubberflooring.co.uk

B. Daily Cleaning

1. Dry vacuum floor thoroughly.
2. Wet mop soiled areas with a mild detergent.
3. Rinse area with clean water and allow to dry thoroughly.

C. Sealer Maintenance

1. Clean up spills and mop work area as necessary with a mild detergent.

D. Sealer Restoration

1. When sealer is worn, scrub thoroughly with mild detergent and recoat with one or two coats over worn areas. If the sealer is kept clean and build-up is avoided no stripping of the sealer will be necessary.